

Installation Instructions of ATS

Connection of Box



Material List:

- 1 Box
- Power cord
- 2 Cables
 - Female end to Female end
 - Female end to Male end

- Flashlight



1. Lay out materials (Figure 1)
2. Plug Male to Female cable into the back of the spreader controller.
3. Take the other end of that cable and connect it to the ATS where it says "SPREADER".
4. Get the other cable and connect one of the ends to the ATS where it says "Modem."
5. Connect the other end of the modem cable to the serial port labeled "spreader control" on the bottom of the MDC. (Figure 6).

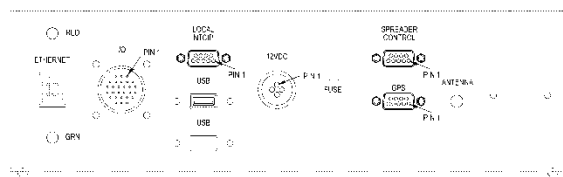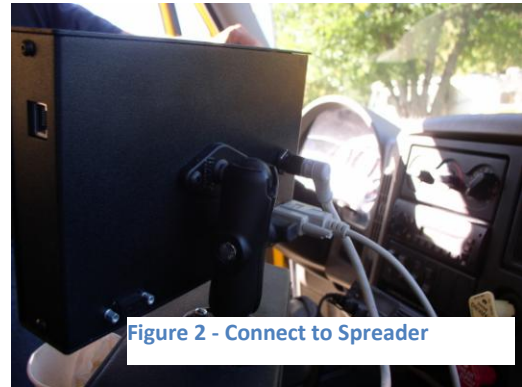

6. Connect the power wires to the port on the ATS that is labeled “PWR.” (Figure 7 – Power Connection)

Figure 4 - Connect to MDC

7. Connect the other end of the power (wires) so they turn on when the key is on. Note: the wires are short and may need to be extended.



Figure 5 – Power Connection

8. When the above steps have been completed, the lights on the front of the ATS should light up.
9. The next steps will be on the MDC. **See MDC Computer Instructions.**